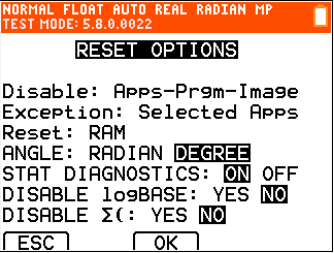
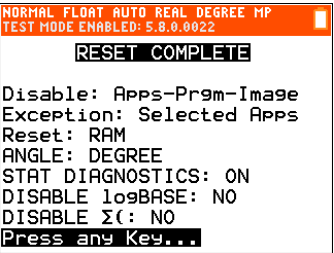
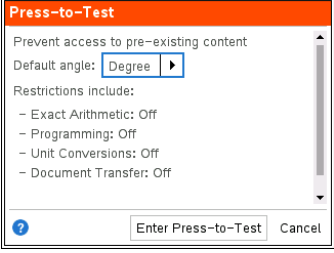
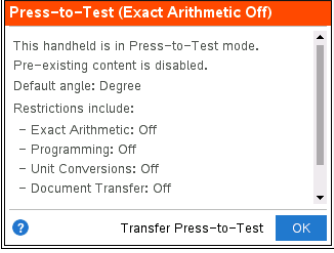



Calculator in exam mode (online)

<div>Texas Instruments (TI)</div> <div>84 Plus CE-T (OS 5.6 or higher)</div> <div>84 Plus CE-T (Python Edition) (OS 5.6 or higher)</div>	<div>Texas Instruments (TI)</div> <div>Nspire CX (OS 4.5.4 or higher)</div> <div>Nspire CX II-T (OS 5.4 or higher)</div>
<div><div><div><div>1. Turn off your calculator.</div><div>2. Simultaneously press enter and +, hold these buttons and press on until the following screen appears:</div><div></div><div><div>3. For ANGLE choose the desired angular measure (you can change this later if you want).</div><div>4. For STAT DIAGNOSTICS choose ON</div><div>5. For DISABLE logBASE choose NO</div><div>6. For DISABLE Σ(: choose NO</div><div>7. Press zoom (OK)</div></div><div><div>The calculator will now restart in exam mode. This may take a while.</div><div></div></div><div><div>8. Press any key to activate exam mode.</div></div></div></div></div>	<div><div><div><div>1. Turn off your calculator.</div><div>2. Simultaneously press enter and +, hold these buttons and press on until the following screen appears:</div><div></div><div><div>3. Choose the desired angular measure (you can change this later if you want).</div><div>4. Choose 'Enter Press-to-Test'.</div></div><div><div>The calculator will now restart in exam mode. This may take a while.</div><div></div></div><div><div>5. Choose 'OK'.</div></div></div></div></div>

CASIO


fx-9860GII (SD) (OS 2.11 or higher)
fx-CG50 (OS 3.50 or higher)

1. Turn off your calculator.
2. Simultaneously press **8** and **→**, hold these buttons and press **AC/ON** until the following screen appears:

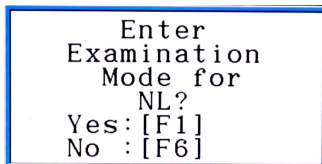


Enter
Examination
Mode for
NL?
Yes: [F1]
No : [F6]

3. Press **F1** (Yes).

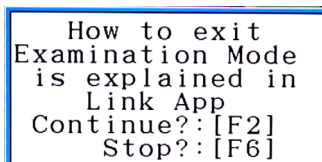

How to exit
Examination Mode
is explained in
Link App
Continue?: [F2]
Stop?: [F6]

4. Press **F2** (Continue).

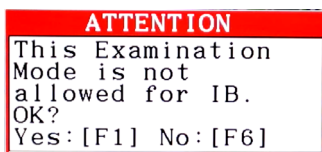


ATTENTION
This Examination
Mode is not
allowed for IB.
OK?
Yes: [F1] No: [F6]

5. Press **F1** (Yes).
The calculator is now in exam mode.


HP

Prime (firmware 2.1.14603 (2021-12-02) or higher)

1. Turn on your calculator.
2. Simultaneously press **On** and **Esc**
3. For 'Configuration' choose 'Custom Mode'.

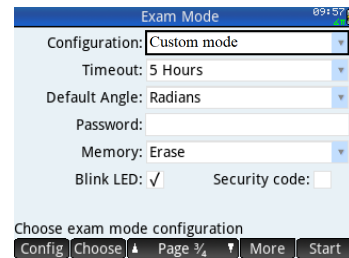

4. For 'Timeout' choose '5 Hours'.
5. For 'Default Angle' choose the desired angular measure (you can change this later if you want).
6. Don't enter a password.
7. For 'Memory' choose 'Erase' (if you don't see a dropdown-menu but a checkbox, then mark this checkbox).
8. Mark 'Blink LED'.
9. Press 'Config' (at the bottom of the screen).

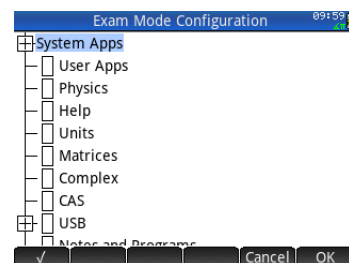


10. Mark the following things:
 - User Apps
 - CAS
 - Notes and Programs
 - New Notes and Programs
11. Press 'OK' (at the bottom of the screen).
12. Press 'Start' (at the bottom of the screen).
13. Swipe the icon (the blue lock) to the right to start the exam mode.


NumWorks

version 19 or higher

1. Turn on your calculator.
2. Use to arrow keys to navigate to 'Settings' and press **ok**
3. For 'Country' choose 'Netherlands'
4. Choose 'Exam mode'.

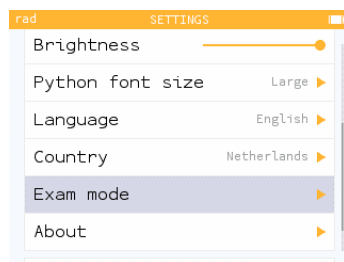

5. Choose 'Activate Dutch exam mode'.

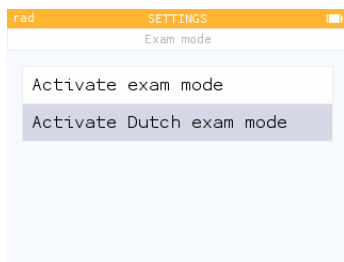

6. Choose 'Confirm'.
- The calculator is now in exam mode.

